

# FA-2242

## Fault Auto Exchanger




### FEATURES

- Spare amplifier will be turn on automatically, incase of main amplifier is out of order on the way of operating to announce emergency situation or important broadcasting.
- Led indicator will be flashed and buzzer will make sound.
- Speaker line of amplifier output is ground, LED indicator will be flashed and buzzer will make sound.
- Convenient signal volume control per amplifier.
- High fidelity electronic balanced input circuit.
- AC / DC 24V
- Versatile usage
  - 4main amplifier + one spare amplifier.
  - 8main amplifier + one spare amplifier.
  - 16main amplifier + one spare amplifier.
  - Extended if want.

### TECHNICAL SPECIFICATIONS

Signal input / output	1 : 1 (Level Variable)
Dynamic range	+18dB (6.15V)
Frequency Response	Less than 0.5dB (20Hz ~ 20KHz)
THD at 1kHz	Less than 0.04%
Signal to Noise Ratio	Less than 86dB
Power Consumption	15W
Power	AC230V/50Hz, DC24V
Dimensions(mm)	483(W) x 88(H) x 200(D)m/m
Weight(kg)	4.5kg

### DRAWING

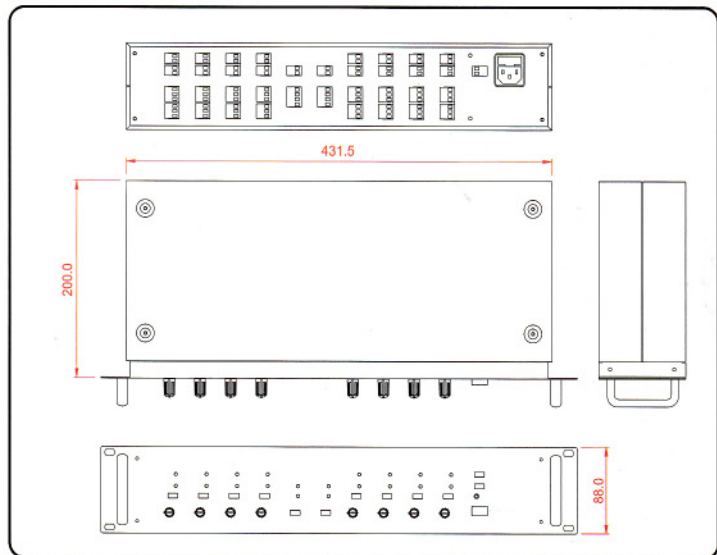

### REAR VIEW

